## USER GUIDE FOR IR3624 EVALUATION BOARD USING IRF8910 SO-8 DUAL MOSFET AND 2x 22uF CERAMIC OUTPUT CAPACITORS

### DESCRIPTION

International

**IR**Rectifier

The IR3624 IC is a synchronous Buck controller, providing a cost-effective, high performance and flexible solution.

Key features offered by the IR3624 Include programmable soft start ramp, fixed 600kHz switching frequency requiring no external components and input under-voltage lockout for proper start up.

An output over-current protection function is implemented by sensing the voltage developed across the on-resistance of the synchronous rectifier MOSFET for optimum cost and performance. This user guide contains the schematic and bill of materials for the IR3624 evaluation board. The guide describes operation and use of the evaluation board itself. Detailed application information for the IR3624 integrated circuit is available in the IR3624 data sheet.

### **Evaluation Board Specifications:**

V<sub>IN</sub> = +12V, (13.2V Max) V<sub>OUT</sub> = +1.8V @ 6A

<b>CONNECTIONS:</b>		
	JP1	V <sub>IN</sub> ( +12V)
		Ground
	JP2	V <sub>out</sub> ( +1.8V)
		Ground
	J1	LX (inductor input node)
		Ground



## IRDC3624EVAL

## **CONNECTION DIAGRAM**

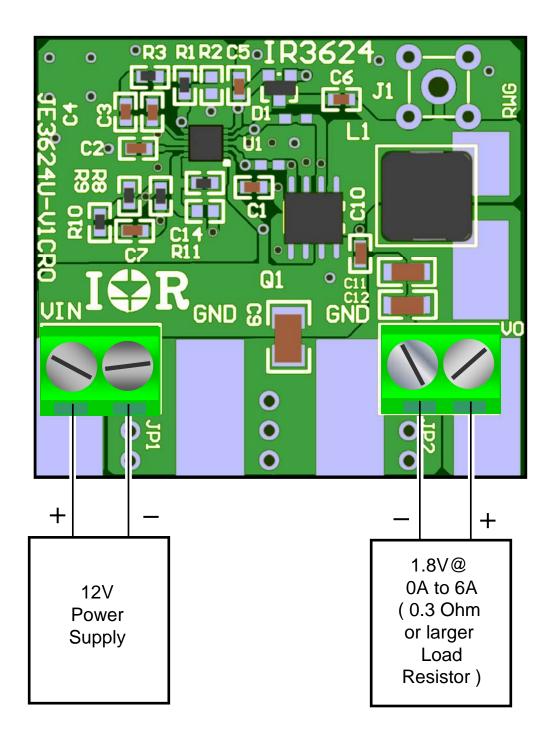


Figure 1 – Connection diagram of evaluation board for IR3624


## LAYOUT

The PCB is 4-layer FR4 board. The IR3624 IC, the switching MOSFETS, and the associated passive components are mounted on the top side of the board. The bottom layer is used primarily for the signal and power grounds. The single point of connection between the signal ground and the power ground is located on the bottom layer.

Power supply decoupling capacitors, the charge pump capacitor and feedback components are located close to the IR3624 IC. The feedback resistors are connected to the output voltage at the point of regulation and are located close to the IC. The switch MOSFET and the synchronous rectifier MOSFET are packaged together in a single SO-8 footprint device. The input and output energy storage capacitors and the power inductor are located close to the MOSFET package.

To improve efficiency, the circuit board is designed to minimize the length of the onboard power ground current path. Breaks in the solder mask are provided to allow easy soldered connections to external power supply and load devices.

## Single point of connection between Analog Ground and Power Ground

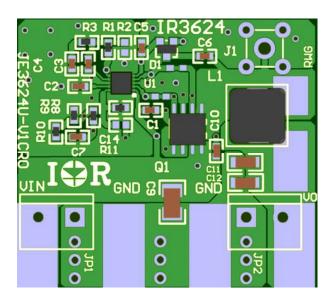


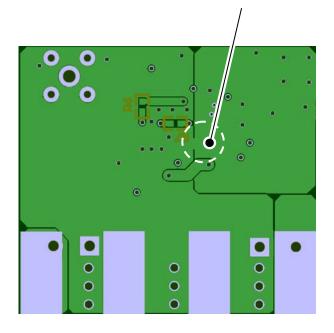


Figure 2 – Top and Bottom layers of the IR3624 evaluation board.



## LAYOUT - GROUNDS

The two mid-layers are used primarily for Analog and Power ground. The two grounds are kept separated from each other. They are connected at a single point on the bottom layer as shown in Figure 2.

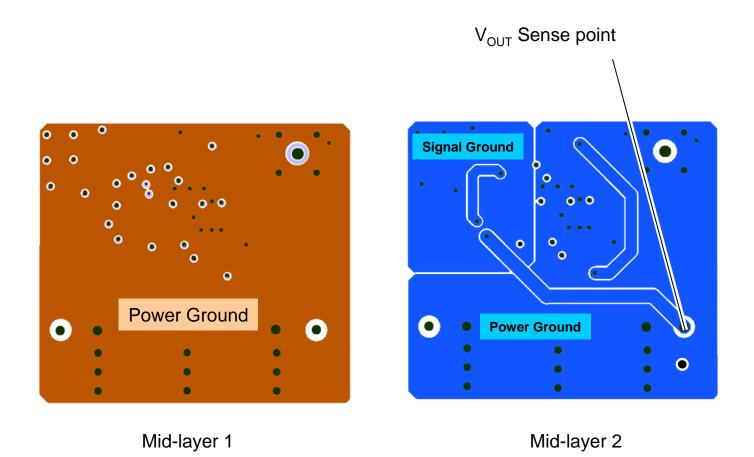


## Figure 3 – Internal layers of IR3624 evaluation board.

#### Rev 1.0 03/11/2006



Figure 4 – Schematic of the IR3624 evaluation board

## IRDC3624EVAL

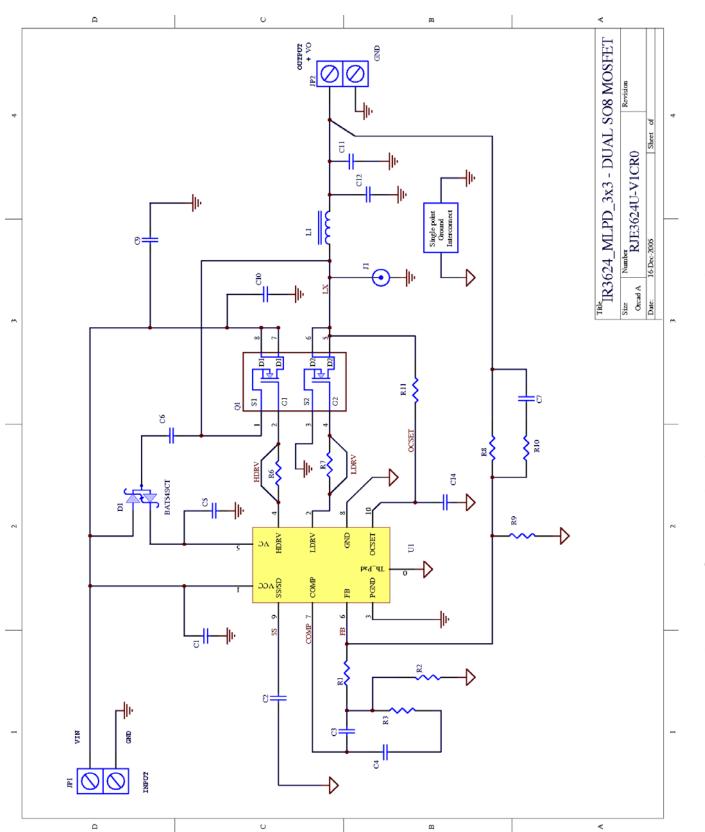

# International


## BILL OF MATERIALS


Ref Desig	Value	Description	Qty	Part#	Source
U1	Buck Synchronous	Controller, 10 lead MLPD	1	IR3624MPBF	International Rectifier
Q1	20V ,13.4mOhm	MOSFET	1	IRF8910	International Rectifier
D1	Schottky	SOT-23 Dual Diode	1	BAT54SCT	International Rectifier
L1	0.82uH	Inductor	1	STS703-R82M	ACT
C9	10uF, 25V, X5R,	EIA, 1210	1	ECJ4YB1E106M	Panasonic
C11, 12	22uF,6.3V,X5R,	EIA 0805	2	ECJ2FBOJ226M	Panasonic
C4	3900pF,50V,X5R	EIA 0603	1	ECJ-1VB1H392K	Panasonic
C3	100pF, 50V NP0	EIA 0603	1	ECJ-1VB1H101J	Panasonic
C7	330pF, 50V NP0	EIA 0603	1	ECJ-1VC1H331J	Panasonic
C10	1 uF, 16V X5R	EIA 0603	1	ECJ-1VB1C105K	Panasonic
C1, 2	0.1 uF, 16V Y5V	EIA 0603	2	ECJ-1VF1C104Z	Panasonic
C5, 6	0.1 uF, 50V Y5V	EIA 0603	2	ECJ-1VF1H104Z	Panasonic
R1	0 Ohm	EIA 0603	1	any	
R3	5.11 kOhm	EIA 0603	1	any	
R8	28.0 kOhm	EIA 0603	1	any	
R9	14.0 kOhm	EIA 0603	1	any	
R10	2.00 kOhm	EIA 0603	EIA 0603 1		
R11	9.09 kOhm	EIA 0603	1	any	
JP1, 2	2-wire	Terminal Block	2	ED1973-ND	Digi-Key
РСВ		Circuit Board	1	RJE3624U-V1CR0	International Rectifier
NONE		Adhesive rubber foot	4	SJ67-A2	3M "BUMPON"
C14		EIA 0603	Unused		
R2		EIA 0603	EIA 0603 Unused		
R6		EIA 0603	03 Unused		
R7		EIA 0603	Unused		
J1		O-Scope-probe tip jack	Unused	131-5031-00	Tektronix

# International

### TYPICAL OPERATING WAVEFORMS

Vin=13.2V, Vo=1.8V, Io=0-6A, Fs=600 kHz, Room Temperature, No Air Flow

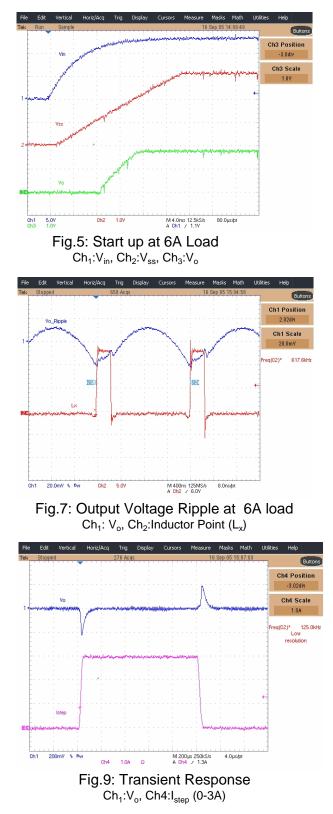

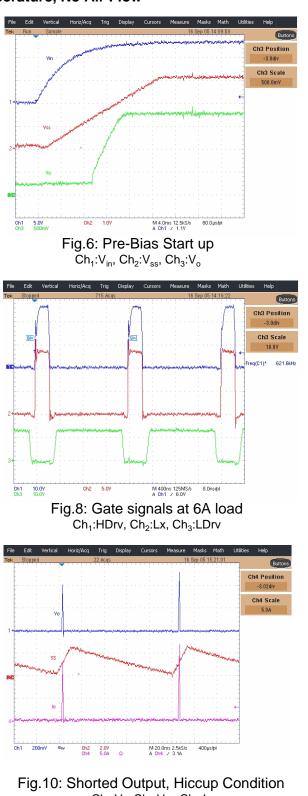

 $Ch_1:V_o,\ Ch_2:V_{ss},\ Ch_4:I_o$ 

# International

### TYPICAL OPERATING WAVEFORMS

Vin=13.2V, Vo=1.8V, Io=0-6A, Fs=600 kHz, Room Temperature, No Air Flow


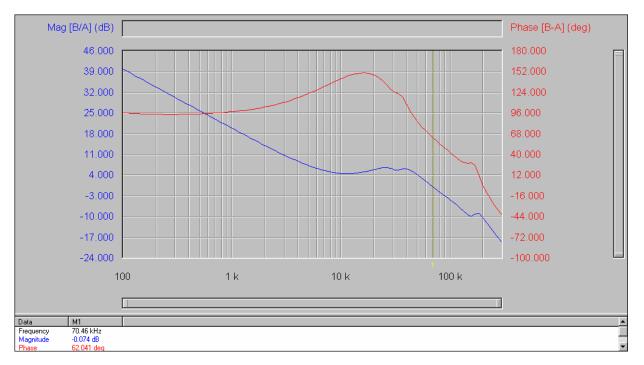



Fig.11: Bode Plot at 10% of load shows a bandwidth of 70kHz and phase margin of 62 degree




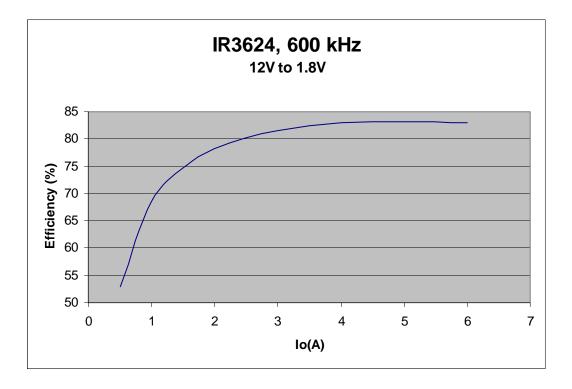


## **IRDC3624EVAL**

## International **IR**Rectifier

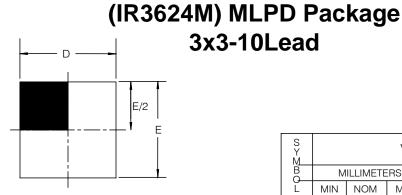



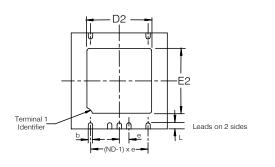

S Y M	VEED-5						
B G	MILLIMETERS			INCHES			
Ĺ	MIN	NOM	MAX	MIN	NOM	MAX	
А	0.80	0.90	1.00	.032	.035	.039	
A1	0.00	0.02	0.05	.000	.0008	.0019	
A3	0.20 REF			.008 REF			
b	0.18	0.25	0.30	.0071	.0098	.0118	
D2	2.20	_	2.70	.087	_	.106	
D	3.00 BSC			.118 BSC			
E	3.00 BSC			.118 BSC			
E2	1.40	-	1.75	.055	-	.068	
L	0.30	0.40	0.50	.012	.016	.019	
е	0.50 PITCH			.020 PITCH			
Ν	10			10			
ND	5			5			

## **TAPE & REEL ORIENTATION**

3x3-10Lead

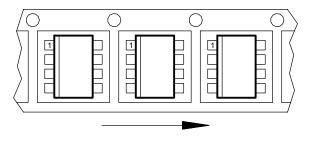


Figure A

IR WORLD HEADQUARTERS: 233 Kansas St., El Segundo, California 90245, USA Tel: (310) 252-7105 TAC Fax: (310) 252-7903 This product has been designed and qualified for the Industrial market. Visit us at www.irf.com for sales contact information Data and specifications subject to change without notice. 02/01